

Installation of USB-RS232 Converter under iMac

Note :

1. Please install USB-RS232 Converter and follow the procedure as below.
2. Plug the USB-RS232 Converter into the USB port of your computer.


Step 1:

- (A) Please insert the driver disk into your computer.
- (B) Double click "USB Serial Support" to continue.




Step 2:

Click "Install" to continue.

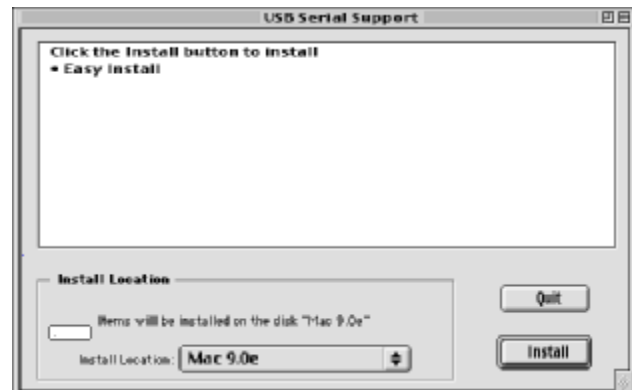

Step 3:


Click "Quit" to complete setup.

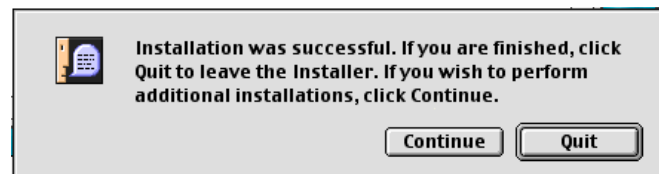


◆ **To make sure the USB-RS232 Converter has installed successfully**

Please move the cursor to “Hard Disk” → “System Folder” → “Extensions”. It will create new direction “SerialShimLib” and “USB RS232 Support”.

(A)

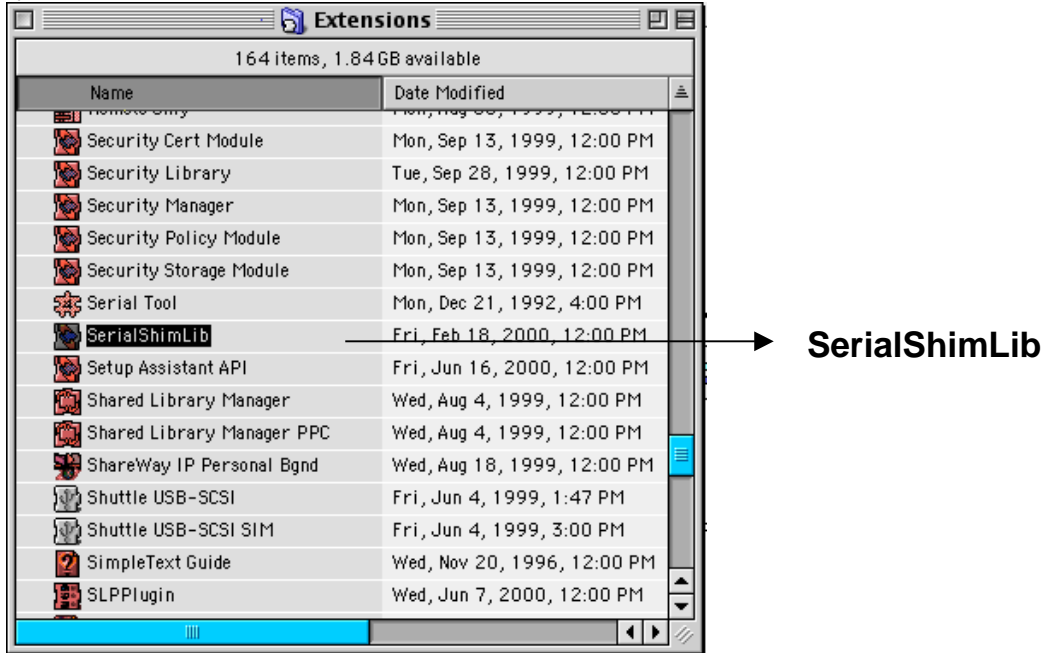

(B)

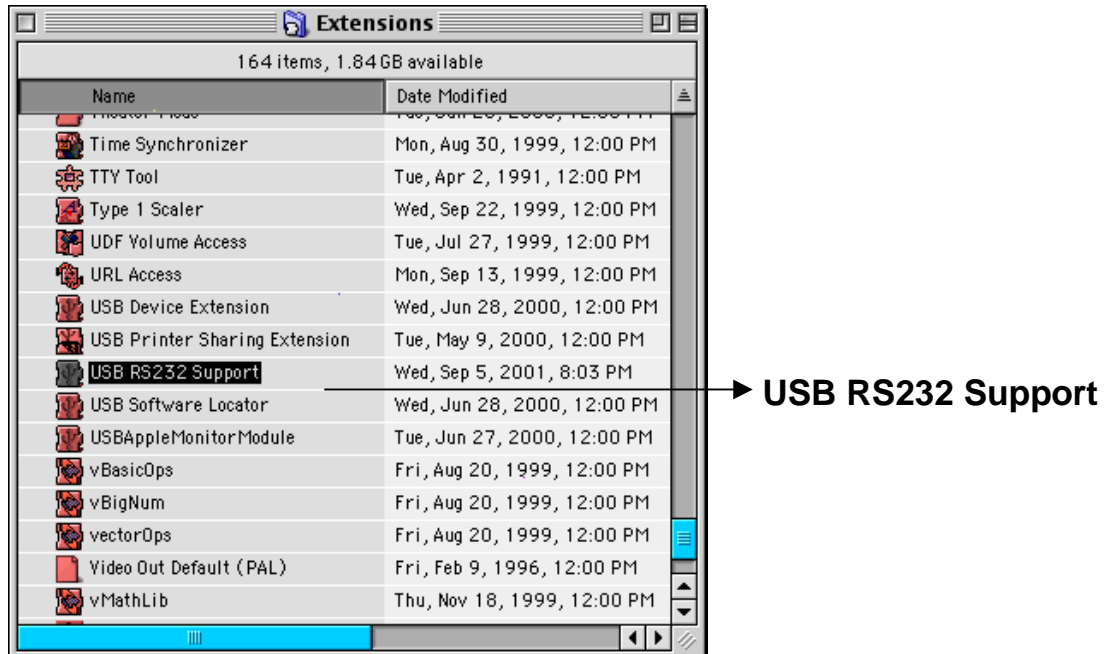

◆ Uninstallation

If you want to remove the driver of USB RS232 Converter, please move the cursor to “Hard Disk” → “System Folder” → “Extensions” then move the “SerialShimlib” and “USB RS232 Support” to trash.

(A)



(B)

