

Installation of USB to Serial Converter under Windows 98

WARNING:

You must install the USB to Serial Converter software **BEFORE** connecting it to your computer.

◆ Software Installation


Step 1.

- 1) Please insert the driver CD into the CD-ROM. Setup will begin automatically.
- 2) Choose setup language.
- 3) Click “**OK**” to continue.




Step 2.

Click “**Next**” to continue.

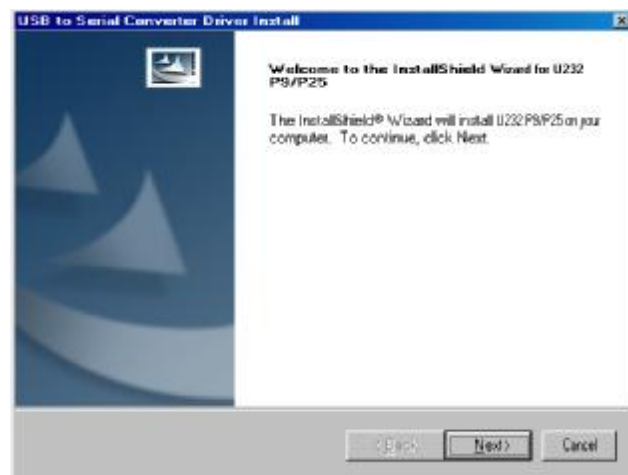


Step 3.

Click “**Next**” to continue.

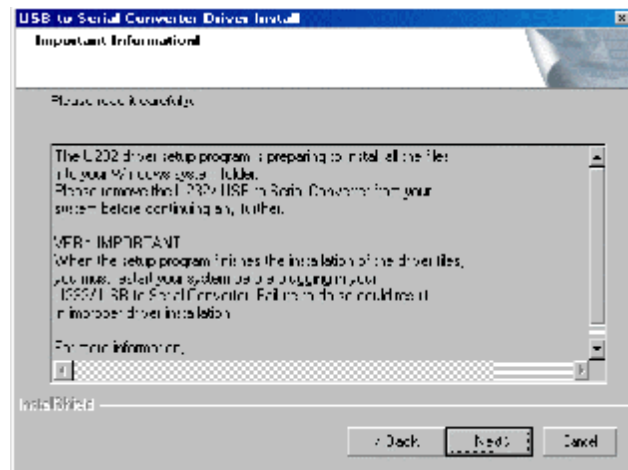


Step 4.

- 1) Select “**Yes, I want to restart my computer.**”
- 2) Click “**Next**” to continue.

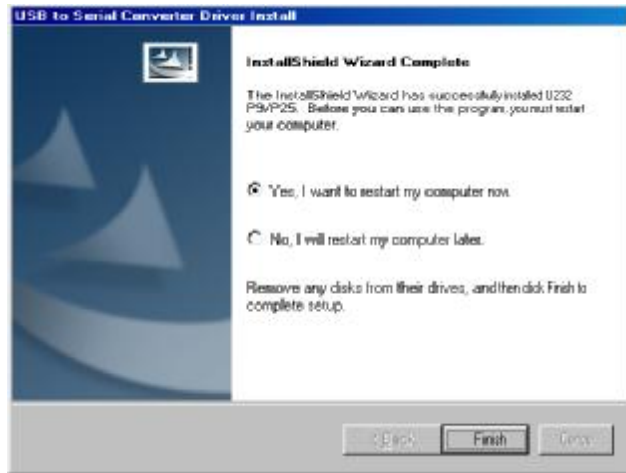

Step 5.


Click “**Finish**” to complete setup.

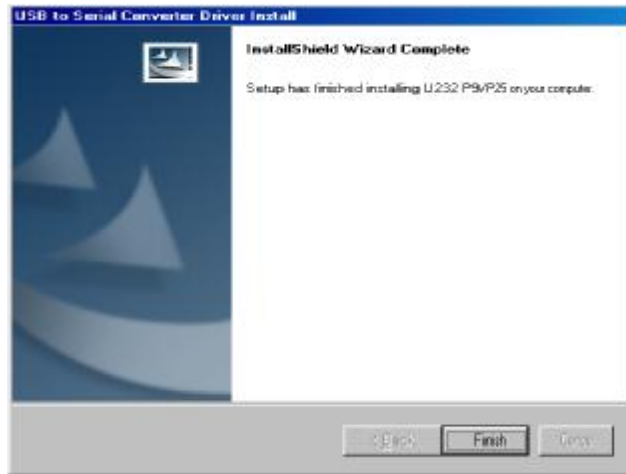


Congratulations!! You have finished installing the USB to Serial Converter.

◆ Verifying devices are installed successfully

1. Please move the cursor to **“My computer”**. Click the mouse right button. It will show a dialog, then click **“Properties”**→**“Device Manager”**. Double click **“Ports [COM & LPT]”**, it will show a new direction **“Serial on USB [COM3]”**

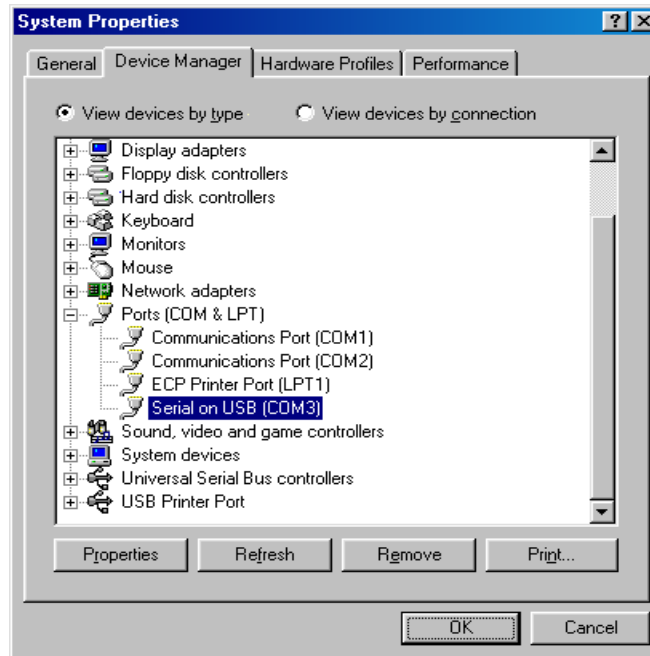

2. Under the same window, double click **“Universal Serial Bus controller”**, it will show a new direction **“USB to Serial Interface Controller”**.

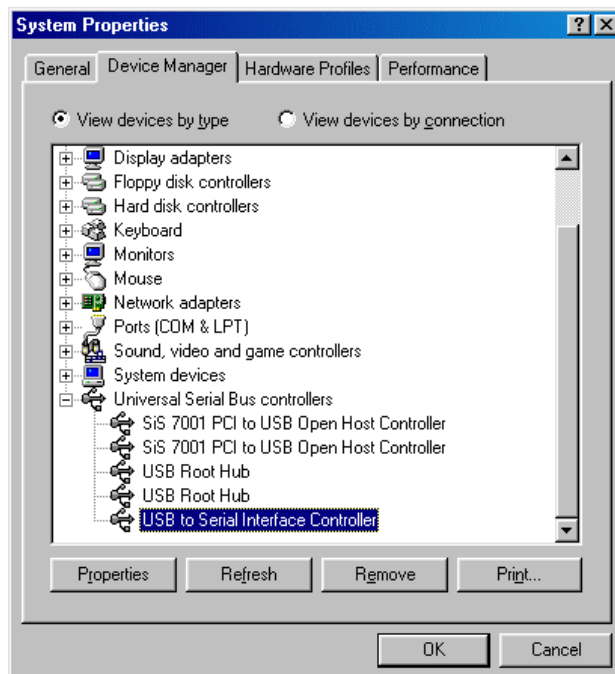


◆ Un-installation

If you want to remove the USB to Serial Converter driver, please click **“Start”** → **“Settings”** → **“Control Panel”** → **“Add/Remove Programs”** → **“Install/Uninstall”**, then follow the procedure:


Step 1.

Select **“U232 P9/P25”** then click **“Add/Remove...”** to continue.

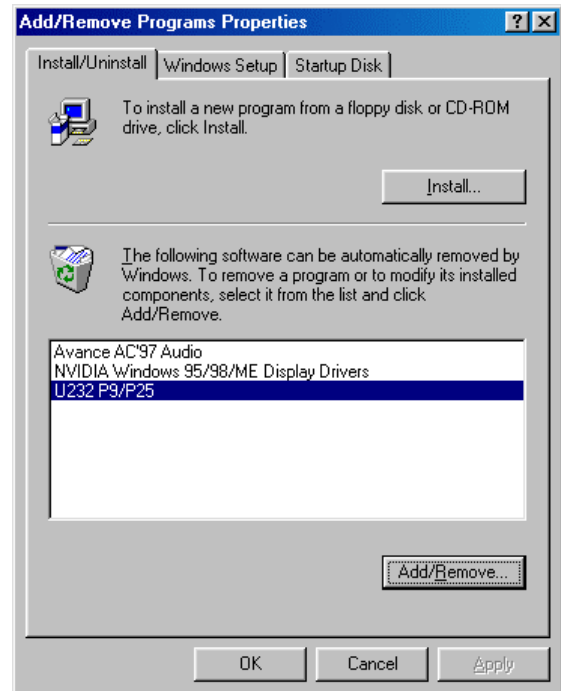

Step 2.

Click **“OK”** to continue.

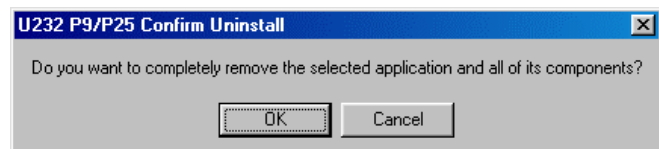

Step 3.

Click **“Finish”** to restart your computer and complete removing the USB to Serial Converter driver.

