

**Item Number**  
RAM-VB-151

**RAM No-Drill™ Seat Bases**  
National Products, Inc.

**Vehicle base for the  
SEMI TRUCKS WITH SEATS INC. CHAIR (2005-NEWER)**

**SPECIFICATIONS**

**Placement**

Attaches to upper section, left hand side of passenger seat. Base is designed to match contours and align with existing hole patterns for ease of installation.

**Drilling Required**

No - uses existing vehicle hardware

**Seat Configuration**

Bucket

**Pole or Pedestal**

Included on Base

**Construction/Finish**

Steel/Black Powdercoat

**Weight**

8 lbs.

**Dimensions**

A = 16.375", B = 8.5", C = 12.75"

Hole Center = 6.75" and 8.25"

**Features**

Installs in minutes with no drilling required

**Misc.**

Rock solid construction

Lifetime warranty

National Products, Inc.  
Phone: 206-763-8361  
Fax: 206-763-9615  
Address: 1205 S Orr St  
Seattle, WA 98108  
Website: [www.ram-mount.com](http://www.ram-mount.com)  
Email: [staff@ram-mount.com](mailto:staff@ram-mount.com)



Shown In Use



RAM-VB-151




**Item Number**  
RAM-VB-151

**RAM No-Drill™ Seat Bases**  
National Products, Inc.

**Vehicle base for the  
SEMI TRUCKS WITH SEATS INC. CHAIR (2005-NEWER)**

**INSTALLATION INSTRUCTIONS**

1. Remove the nut that is attached to the seat frame. This is located on the lefthand side, underneath the seat.  
(See Figure 1)
2. Place the threaded bolts through the holes, facing outward then slide custom metal base over the bolts. Attach the washers and 3 nuts over the threaded bolts then tighten.  
(See Figure 2)

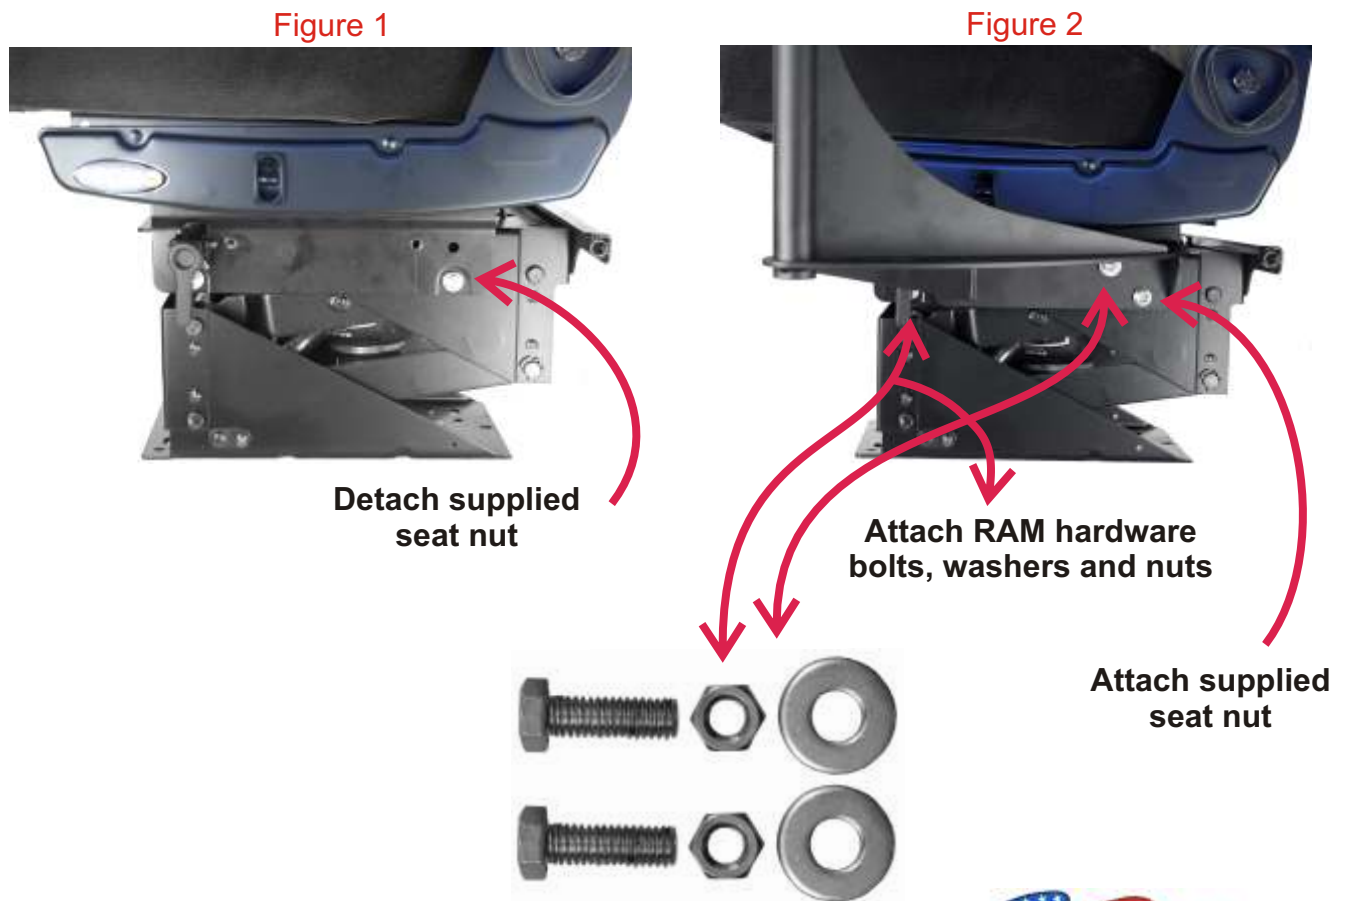

National Products, Inc.  
Phone: 206-763-8361  
Fax: 206-763-9615  
Address: 1205 S Orr St  
Seattle, WA 98108  
Website: [www.ram-mount.com](http://www.ram-mount.com)  
Email: [staff@ram-mount.com](mailto:staff@ram-mount.com)

